

# ARENAS-excellent

## Liquid cleaning booster

- ▲ Phosphate-free cleaning booster
- ▲ Boosts wash performance at 30–90 °C
- ▲ Highly alkaline
- ▲ Prevents premature greying of textiles
- ▲ VAH and RKI listed in combination with ARENAS-wash and ARENAS-oxydes



### Area of application

Suitable for washing coloured and white laundry, as well as cleaning textiles in the temperature range 30–90 °C. For the thermochemical laundry disinfection of alkali-resistant, bleachable textiles in combination with ARENAS-wash and ARENAS-oxydes. Not suitable for textiles made of wool and silk. Only use in combination with liquid ARENAS detergents (see table).

### Application


Separate the textiles to be washed based on colour and the wash temperatures given. Only use in combination with a laundry detergent.

### Washing textiles:

#### Dosage via dosing pumps

Recommended dosage for washing machines	ARENAS-wash	ARENAS-excellent	ARENAS-oxydes
Hardness level 1 (< 1.5 mmol/L)	0.3%–0.5%	0.3%–0.5%	0.2%–0.5%
Hardness level 2 (1.5–2.5 mmol/L)	0.4%–0.6%	0.4%–0.6%	0.2%–0.5%
Hardness level 3 (> 2.5 mmol/L)	0.5%–0.8%	0.5%–0.8%	0.2%–0.5%

Attach the canister to the pump connection for the cleaning booster. Dosage takes place automatically through the washing machine's program control. Consumption: 6.0–18.0 ml/kg of laundry.

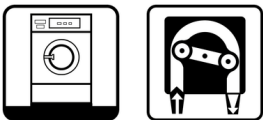

### Note

Kiehl accepts no liability or responsibility for damage caused as a result of incorrect use or application of the product. Not a consumer product according to 1999/44/EC Art. 1! For professional use only!

### Ingredients (according to 648/2004/EC)

Nonionic surfactants < 5%, phosphonates < 5%, alkalis, inorganic salts, additives.  
pH value (concentrate): > 13.5

Art. No.	Packaging unit (PU)	Contents in kg	Numbers of PU per pallet
j652310	10 L canister	13.7	60
j652321	20 L canister	27.4	36
j652372	200 L drum	274	2

# ARENAS-excellent

## Liquid cleaning booster

---

### Classification

Classification (in concentrate): GHS05, Danger. H314 Causes severe skin burns and eye damage. P280 Wear protective gloves/protective clothing/eye protection/face protection. P305+P351+P338 IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. P308+P313 IF exposed or concerned: Get medical advice/attention. Contains: Potassium Hydroxide (INCI)